





























3. Place a corner-cut tile (B) as shown below. Fill in the remaining triangular area with the cut corner (C). Always push part C up against A and B. Any gap that remains at the bottom countertop can be caulked later.

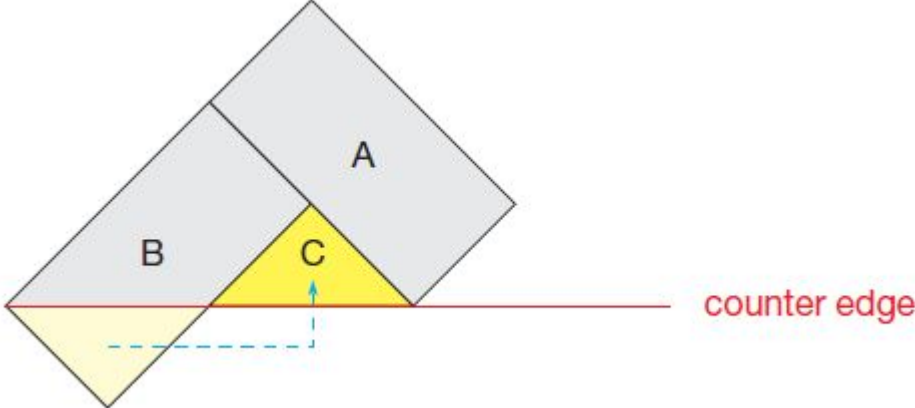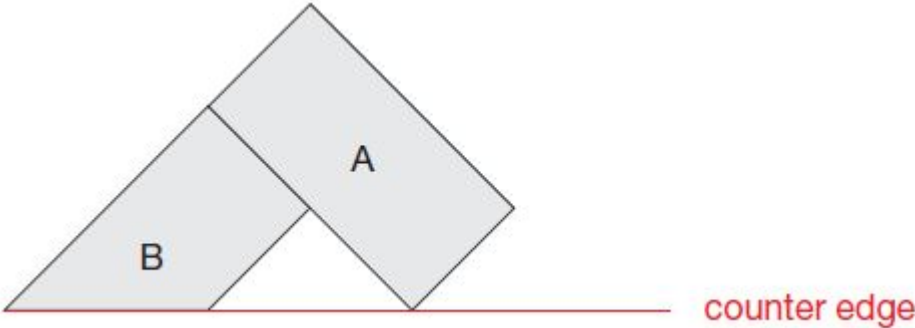

4. Finally it will be shown below.

